


GENERAL INSTRUCTIONS



Fan Wheel Replacement


View these instructions online at www.lbwhite.com

- Fan wheel to motor mount or fan panel spacing must be at proper clearance. Refer to table and illustration.
- The fan wheel must neither rub on the air inlet of the fan housing nor on the motor's bolts.
- Ensure the fan wheel set screw is located on the flat side of the motor shaft before tightening.
- Contact L.B. White Co. if you have any questions.

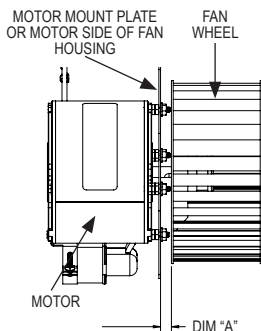

| MODEL | DIM "A" |
|-----------------|--------------------|
| All Premier 40 | 5/16 in. (7.94 mm) |
| All Premier 80 | 1/2 in. (6.35 mm) |
| All Premier 170 | 1/8 in. (3.18 mm) |
| All Premier 350 | See Fig. 1 |

FIG. 1

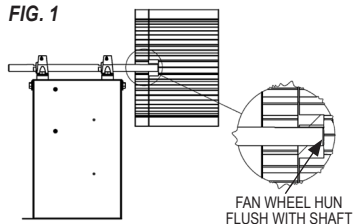

150-26069 REV.B

WORLD PROVIDER - INNOVATIVE HEATING SOLUTIONS

411 Mason Street, Onalaska, WI 54650 • 800-345-7200 • 608-783-5691 • 608-783-6115 (fax) • www.lbwhite.com


GENERAL INSTRUCTIONS



Fan Wheel Replacement


View these instructions online at www.lbwhite.com

- Fan wheel to motor mount or fan panel spacing must be at proper clearance. Refer to table and illustration.
- The fan wheel must neither rub on the air inlet of the fan housing nor on the motor's bolts.
- Ensure the fan wheel set screw is located on the flat side of the motor shaft before tightening.
- Contact L.B. White Co. if you have any questions.

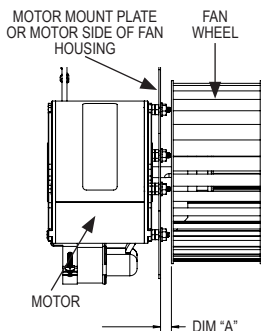

| MODEL | DIM "A" |
|-----------------|--------------------|
| All Premier 40 | 5/16 in. (7.94 mm) |
| All Premier 80 | 1/2 in. (6.35 mm) |
| All Premier 170 | 1/8 in. (3.18 mm) |
| All Premier 350 | See Fig. 1 |

FIG. 1

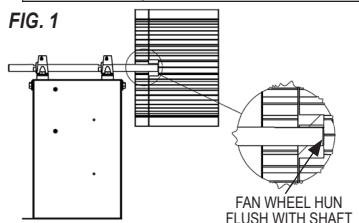

150-26069 REV.B

WORLD PROVIDER - INNOVATIVE HEATING SOLUTIONS

411 Mason Street, Onalaska, WI 54650 • 800-345-7200 • 608-783-5691 • 608-783-6115 (fax) • www.lbwhite.com