INSTALLATION INSTRUCTIONS



FOREMAN Exhaust Stack or Rain Cap

View these instructions online at www.lbwhite.com

⚠ WARNING

Burn Hazard

- Heater surfaces are hot for a period of time after the heater has been shut down.
- Allow the heater to cool before performing service, maintenance, or cleaning.
- Failure to follow this warning will result in burns causing injury.

Kit Contents:

| DESCRIPTION | QTY. |
|--------------------------------|------|
| KIT: 30161 | |
| Pipe, exhaust, 6 in. x 5 ft. | 1 |
| Screw, 8 x 1/2 in. self-drill | 4 |
| KIT: 30162 | |
| Rain Cap, 6 in. | 1 |
| Screw, 8 x 1/2 in., self-drill | 4 |
| KIT: 30161A | |
| Pipe, exhaust, 8 in. x 5 ft. | 4 |
| Screw, 8 x 1/2 in. self drill | 4 |
| KIT: 30162A | |
| Rain cap, 8 in. | 1 |
| Screw, 8 x 1/2 in. self drill | 4 |

Tools required:

- Electric drill with 1/8 in, drill bit
- 1/4 in. nut driver

Initial Preparation: 1. Disconnect the heater from its electrical supply.

A. Installation instruction for kit 30161 / 30161A

- Slide exhaust pipe onto heater exhaust stack.
- Drill 4 1/8 in. holes evenly spaced around the exhaust stack. See Fig. 1.



Secure exhaust pipe with screws supplied in kit. See Fig. 2.



C. Installation instruction for kit 30162 / 30162A

1. Slide rain cap onto exhaust pipe. See. Fig. 3.





Secure rain cap with screws supplied in kit (space screws evening around the pipe). See Fig. 4.

FIG. 4



Service

Contact your local L.B. White dealer for replacement parts and service. You may also call the L.B. White Co., Inc. at 1-800-345-7200, for assistance, or email us at customerservice@lbwhite.com.

Be sure that you have your heater model number and configuration number when calling.



WORLD PROVIDER - INNOVATIVE **HEATING SOLUTIONS**

411 Mason Street, Onalaska, WI 54650 800-345-7200 • 608-783-5691 608-783-6115 (fax)

www.lbwhite.com