

INSTALLATION INSTRUCTIONS



Replacement Signal Conditioner

View these instructions online at www.lbwhite.com

- Replace the signal conditioner with the one provided in kit. Install it in the control box using two screws and reconnect wiring per FIG. 1

SIGNAL CONDITIONER SWITCH SETTINGS


See Fig. 1

- 4-20 mA or 0-20 mA signal,
 - Set the selector switch accordingly.

Control signal wire connections are made at the screw terminals. Observe polarity when making connections.

ATTENTION: In the event the building controller fails and providing the heater has a backup thermostat, the signal conditioner will boost the gas valve output to full heat. With the heater operating in this condition the gas control valve will not modulate.

FIG. 1

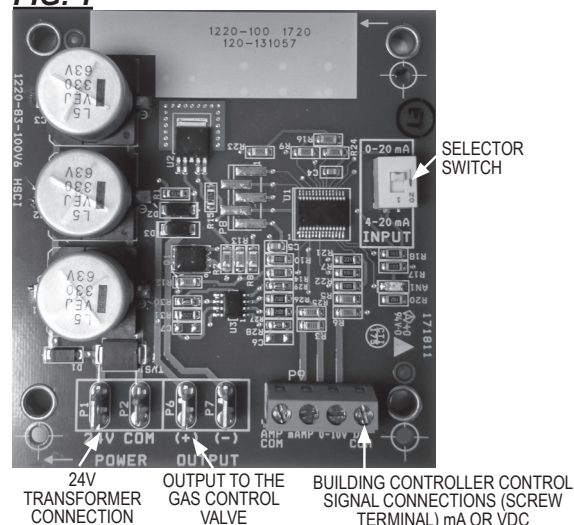

WORLD PROVIDER - INNOVATIVE HEATING SOLUTIONS

411 Mason Street, Onalaska, WI 54650 • 800-345-7200 • 608-783-5691 • 608-783-6115 (fax) • www.lbwhite.com

150-133291 REV.A

INSTALLATION INSTRUCTIONS



Replacement Signal Conditioner

View these instructions online at www.lbwhite.com

- Replace the signal conditioner with the one provided in kit. Install it in the control box using two screws and reconnect wiring per FIG. 1

SIGNAL CONDITIONER SWITCH SETTINGS


See Fig. 1

- 4-20 mA or 0-20 mA signal,
 - Set the selector switch accordingly.

Control signal wire connections are made at the screw terminals. Observe polarity when making connections.

ATTENTION: In the event the building controller fails and providing the heater has a backup thermostat, the signal conditioner will boost the gas valve output to full heat. With the heater operating in this condition the gas control valve will not modulate.

FIG. 1

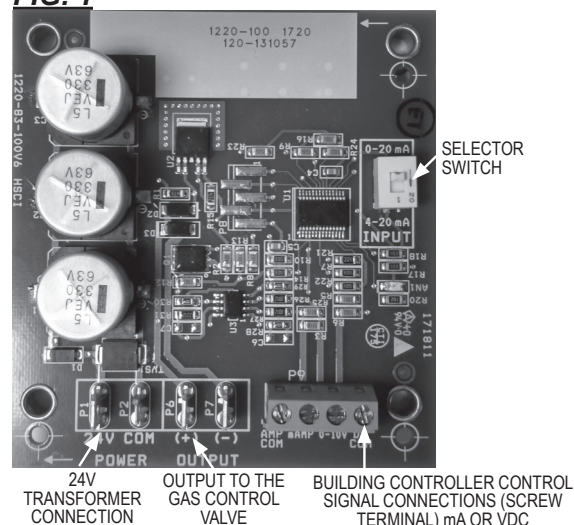

WORLD PROVIDER - INNOVATIVE HEATING SOLUTIONS

411 Mason Street, Onalaska, WI 54650 • 800-345-7200 • 608-783-5691 • 608-783-6115 (fax) • www.lbwhite.com

150-133291 REV.A