INSTALLATION INSTRUCTIONS



Commander Stacking Base Kit

View these instructions online at www.lbwhite.com



WARNING Tipping Hazard

- Heaters must be stacked on a solid, stable, level surface.
- Never stack on dirt or other soft surfaces.
- Never try to move stacked heaters.
- Remove gas supply hose and regulator prior to stacking.
- Never stack more than manufacture recommended.
- Never operate the heaters while they are stacked together.
- Do not lift the heater in any other locations than shown in these instructions.
- Failure to follow these warnings can result in serious injury or death.

Kit Contents:

DESCRIPTION	QTY.
Installation Instructions	1
Stacking Base	1

Kits:

Commander 500	500-133994A
Commander 1000	500-133994B
Commander 1500	500-134669A
Commander 2300	500-134669B

Equipment Required:

- OSHA approved forklift, equipped with proper operator cage protection and capable of lifting a minimum of 650 Lbs.

Qualifications for the installation of this kit:

· You must be able to read and fully understand these instructions.

General Information:


- · Read all instructions carefully before starting the installation.
- These instructions detail the proper use of the Commander heater stacking kit.
- The kit is designed to remove the weight of the top heaters from the wheels of the bottom heaters, preventing flat spots.
- · Ensure the heaters are cool or at room temperature before stacking.

WORLD PROVIDER - INNOVATIVE HEATING SOLUTIONS

Instructions:


- 1. Position the stacking base and heaters as close to the storage area as possible.
- 2. Using a forklift, carefully lift the heater above the stacking base posts (see Fig. 1).

FIG.1

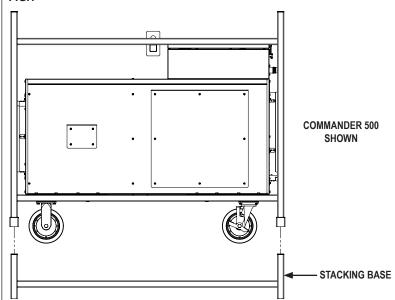

3. Lower the heater onto the stacking base, ensuring the stacking posts are fully inserted into the heater frame sockets (see Fig. 2).

FIG. 2

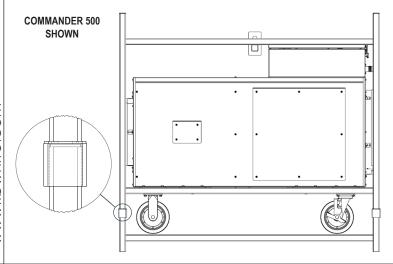


4. If needed, stack an additional heater on top of the first, following the same procedure.

Maximum stack height:

Commander 500/1000: Up to 3 units high. Commander 1500/2300: Up to 2 units high.

FIG. 3

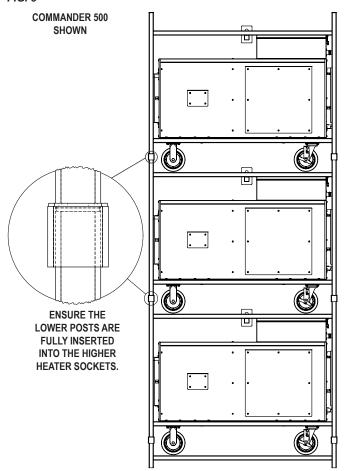

Service

Contact your local L.B. White dealer for replacement parts and service. You may also call the L.B. White Co., Inc. at 1-800-345-7200, for assistance, or email us at customerservice@lbwhite.com.

Be sure that you have your heater model number and configuration number when calling.



WORLD PROVIDER - INNOVATIVE CLIMATE SOLUTIONS

411 Mason Street, Onalaska, WI 54650 800-345-7200 • 608-783-5691 608-783-6115 (fax)

www.lbwhite.com