

INSTALLATION INSTRUCTIONS



Thread-Locker Bolts Hardware Kit

Journeyman 360

View these instructions online at www.lbwhite.com

Qualifications for installation:

- You must read and understand these instructions before beginning the installation.
- You must have sufficient experience to install the kit and test for proper operation.
- You must be able to place the heater in a continuing safe and normal operating condition.

Tools required:

- 1/2 in. combination wrench or
- 1/2 in. socket
- Ratchet

Preparation:

Confirm loose or missing bolts in the following area, See Fig. 1:


- 6 bolts securing the outer barrel to the lower cross members. (A)
- 4 bolts securing the axle assembly to the frame. (B)
- 4 bolts securing the fuel tank strap to the frame, oil only. (B)
- 4 bolts securing the motor support plate. (C)
- 8 bolts securing the frame corner. (D)

Installation Instructions:

The following instructions will illustrate the proper installation of the fastening hardware.

NOTE: DO NOT use an impact driver to try to remove or install the bolt.

- If the bolt is missing, install a new bolt with the thread-locker.
- If the bolt is present, remove it from the rivet nut and install the provided thread-locker bolt.
- Tighten the bolts.

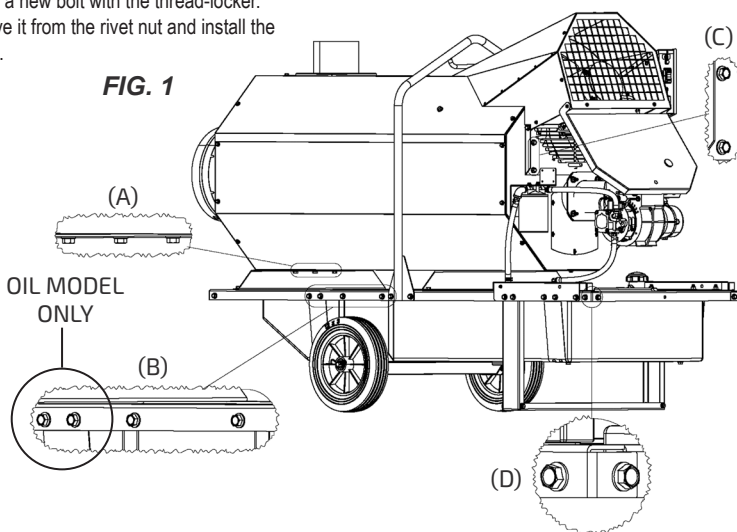

Service

Contact your local L.B. White dealer for replacement parts and service. You may also call the L.B. White Co., LLC at U.S. & Canada: 1-800-345-7200, Overseas: 001-608-783-5691 assistance, or email us at customerservice@lbwhite.com.

Be sure that you have your heater model number and configuration number when calling.



**WORLD PROVIDER - INNOVATIVE
CLIMATE SOLUTIONS**

411 Mason Street, Onalaska, WI 54650

800-345-7200 • 608-783-5691

608-783-6115 (fax)

www.lbwhite.com