




L.B.WHITE


- 1. After the cord has been threaded through the pulley (not provided) on the wall, pull the cord through the hole in the ratchet shaft. (fig. 1)
- 2. Tie a knot in the end of the cord so it will not slip through the hole. (fig. 2)





- 3. Pull the cord so the knot is flush against the ratchet shaft. (fig. 3)
- 4. Use a socket or wrench to turn the 5/8" nut in a clockwise direction until the cord is taught and no slack remains. (fig. 4)

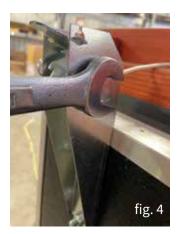

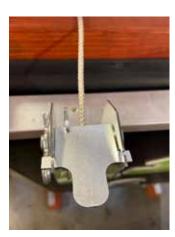

5. Make sure the cord is centered when entering the ratchet from the wall to eliminate the chance of binding or rubbing against the ratchet assembly. (fig. 5)

411 Mason Street, Onalaska, WI 54650 800 345 7200 (toll free) or 608 783 5691 608 783 6115 (fax) info@lbwhite.com | www.lbwhite.com

© 2022 L.B. White Company All rights reserved. All specifications are subject to change without notice.