

INSTALLATION INSTRUCTIONS



Oval 80 HP Fuel Inlet Screen Adapter Rework Kit

View these instructions online at www.lbwhite.com

Tools required:


- Pipe wrench
- An adjustable wrench or 15/16 in. open end wrench

For Serial Numbers
Prior to L00294120

Discussion:

- This kit contains a fuel inlet screen to prevent gas piping contamination from getting into the solenoid valve or burner orifice.
- This rework kit is to be used **ONLY** on new Oval 80 HP heaters that have not had the sediment trap installed. See Figure 1.


Fig. 1

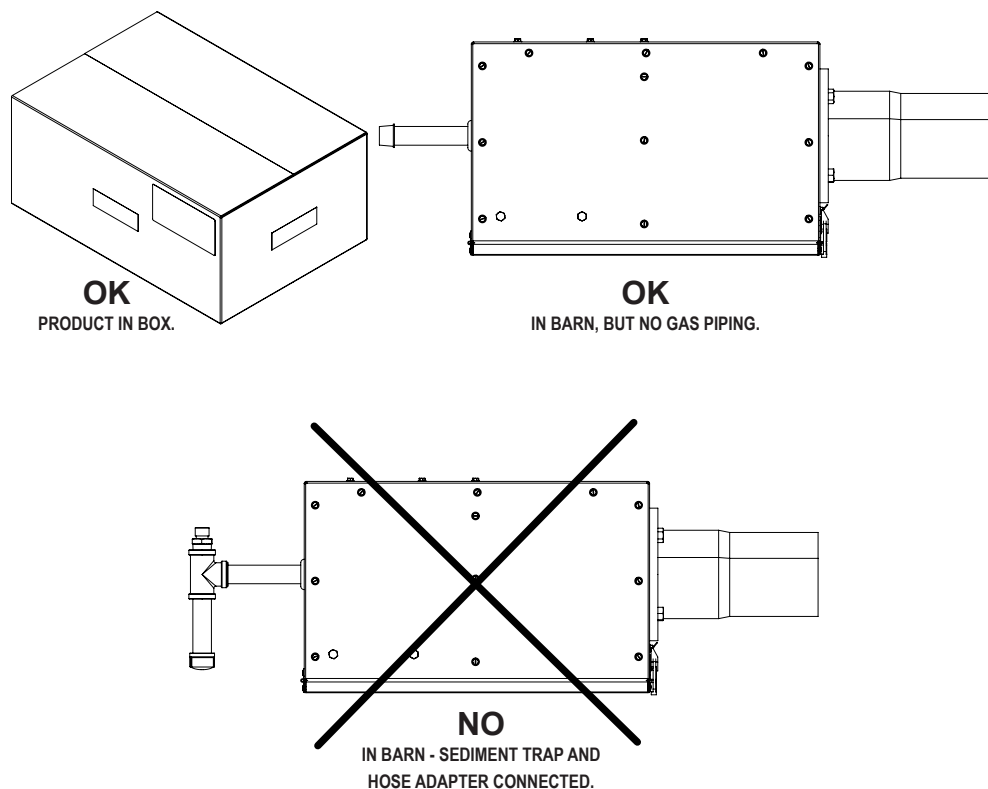

Installation:

1. Apply piping compound to the $\frac{1}{2}$ in. NPT threads of the hose adapter and fuel inlet screen adapter.
2. Install both into the sediment trap tee and tighten securely. See Fig. 2 below.
3. Follow owners manual instructions for complete sediment trap assembly and installation.

Fig. 2

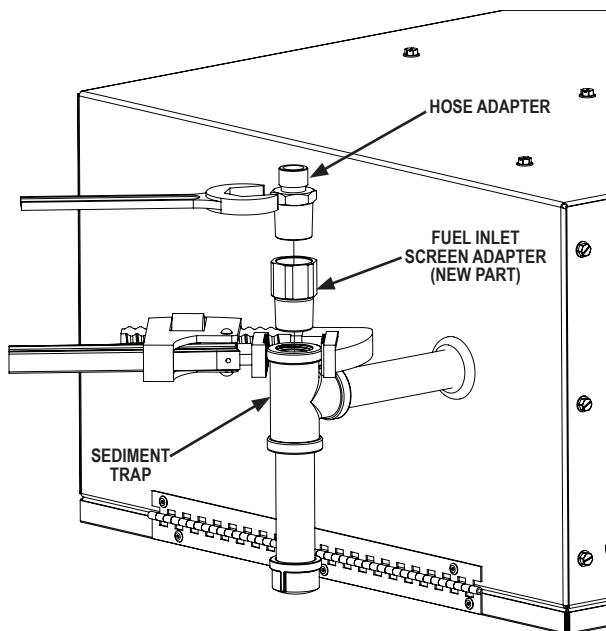

Service:

Contact your local L.B. White dealer for replacement parts and service. You may also call the L.B. White Company, LLC at 608-783-5691, for assistance, or email us at customerservice@lbwhite.com.

Be sure that you have your heater model number and configuration number when calling.



**WORLD PROVIDER - INNOVATIVE
HEATING SOLUTIONS**

411 Mason Street, Onalaska, WI 54650

800-345-7200 • 608-783-5691

608-783-6115 (fax)

www.lbwhite.com